

VDB1609 Datasheet

Document Information

Title	VDB1609 Datasheet	
Document Type	Datasheet	
Document Number	WN-20070034	
Version & Date	V1.01	31-Jul-2020
Classify	Open	

History Version

Version	Content	Confirm	Date
V1.01	Initial Release	Sherman	20200731

95POWER 保留本文档及本文档所包含的信息的所有权利。95POWER 拥有本文档所述的产品、名称、标识和设计的全部知识产权。严禁没有征得 95POWER 的许可的情况下复制、使用、修改或向第三方披露本文档的全部或部分内容。

95POWER 对本文档所包含的信息的使用不承担任何责任。没有明示或暗示的保证，包括但不限于关于信息的准确性、正确性、可靠性和适用性。95POWER 可以随时修订这个文档。可以访问 www.95power.com.cn 获得最新的文件。

Copyright © 2018， 深圳市微能信息科技有限公司。

95POWER® 是深圳市微能信息科技有限公司在中国的注册商标。

Content

1. Product introduction.....	4
2. Basic parameters.....	5
3. Software Application Guide.....	5
3.1 Download APP.....	5
3.2 Scan Bluetooth Beacon.....	5
3.3 Connect Bluetooth Beacon.....	7
3.4 Configuration Introduction.....	8
3.5 Modify Bluetooth Beacon Name.....	9
3.6 Modify UUID.....	10
3.7 Modify User service data.....	11
3.8 Modify Major/Minor.....	12
3.9 Modify Measured Power.....	13
3.10 Modify Transmitting Power.....	14
3.11 Modify Advertise Interval.....	15
3.12 Modify Password.....	16
3.13 Switch mode.....	17
3.14 Eddystone configuration page Introduction.....	18
3.15 Modify URL.....	19
3.16 Other Setting.....	20
5. Contact information.....	24


1. Product introduction

VDB1609 is a BLE(Bluetooth Low Energy) 4.2 card. It can broadcast its owner's personal identification information like name and UUID. And it can be used as indoor positioning card, which can be located by BLE gateway or other BLE locating base-station.

VDB1609 has a rechargeable 600mAh Li-Battery. It can be charged by a magnetic USB connector line. Please follow the magnetic draw direction which will combine the card and connector tightly. Do not let the battery run out for too long, which may damage the battery, and make it difficult to recharge.

VDB1609 has a power key which can also be used as SOS key. Short press can activate the SOS signal, and long press (>3S) can power on or power off the card.

VDB1609 has two LED. The red one will be on when the battery is charging. The blue one will be on when pressing the button.

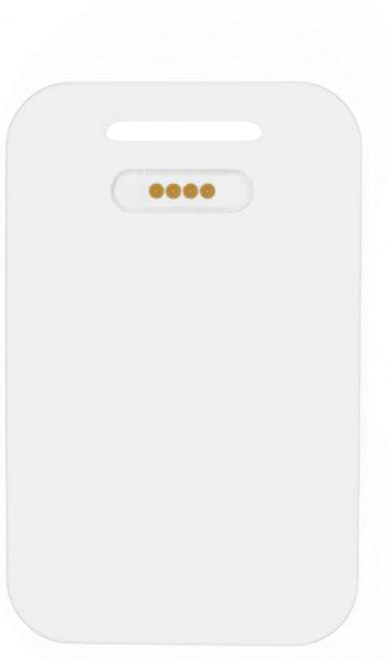

Bottom side



Top side (without key)



Top side (with key)

2. Basic parameters

BLE4.2 TX power	+4dBm Max
BLE4.2 RX sensitivity	-96dBm
Frequency	2400~2483.5MHz
Battery Life	>3 month
Power consumption	Idle 5uA, TX 8mA@0dBm, RX 11mA
LED	Charging LED, state LED
Key	Short press: SOS Long press: Turn on/off
Broadcasting distance	100 meters
Battery capacity	600mAh
Charging cable	Magnetic connect cable
Charging time	4 hours
Program updating	Support USB JLINK Support OTA(Over The Air, by bluetooth updating)
Operating Temp.	-20~60℃
IP grade	IP67 (water resistance)
Dimention	85.33*53.92*7.26mm
Accessory	Magnetic connect cable, Hanging belt

Table 2-1 Product parameters

3. Software Application Guide

3.1 Download APP

Skylab_xbeacon hasn't been put into the market yet. Please contact our sales for the latest APP.

3.2 Scan Bluetooth Beacon


Open the APP, if cell phone ask for permission to open bluetooth, please select yes. Then it will begin to scan the surrounding Bluetooth Beacons.

stop


	VG05PWR	Beacon		100			
	E4:BE:E6:98:37:82						
	-53		500 ms		0dBm		-61
	13330		30806				
	FFFE2D121E4B0FA4994ECEB531F40545						
	Vdcabd0	Beacon		100			
	DC:AB:D0:22:89:4A						
	-58		400 ms		0dBm		-61
	13330		30806				
	FFFE2D121E4B0FA4994ECEB531F40545						
	Vf66c54	Eddystone_URL		100			
	F6:6C:54:88:97:70						
	-70		0dBm				
	http://www.skylabmodule.com/						
	121E4B0FA4994ECEB531						
	Vfd3a55	Beacon		100			
	FD:3A:55:AF:7F:04						
	-72		500 ms		0dBm		-61
	13330		30806				
	FFFE2D121E4B0FA4994ECEB531F40545						
	sky11	Beacon		16			
	EB:39:DB:67:0C:57						
	-73		300 ms		0dBm		107
	4660		22136				
	FFFE2D121E4B0FA4994ECEB531F40545						
	Vf70a8c	Beacon		87			
	F7:0A:8C:C1:F7:BC						
	-84		500 ms		0dBm		-61
	4660		22136				

3.3 Connect Bluetooth Beacon

Click the Bluetooth Beacon to be connected, enter the password within 30 seconds, in order to obtain operating privileges .(Factory Password:1234)

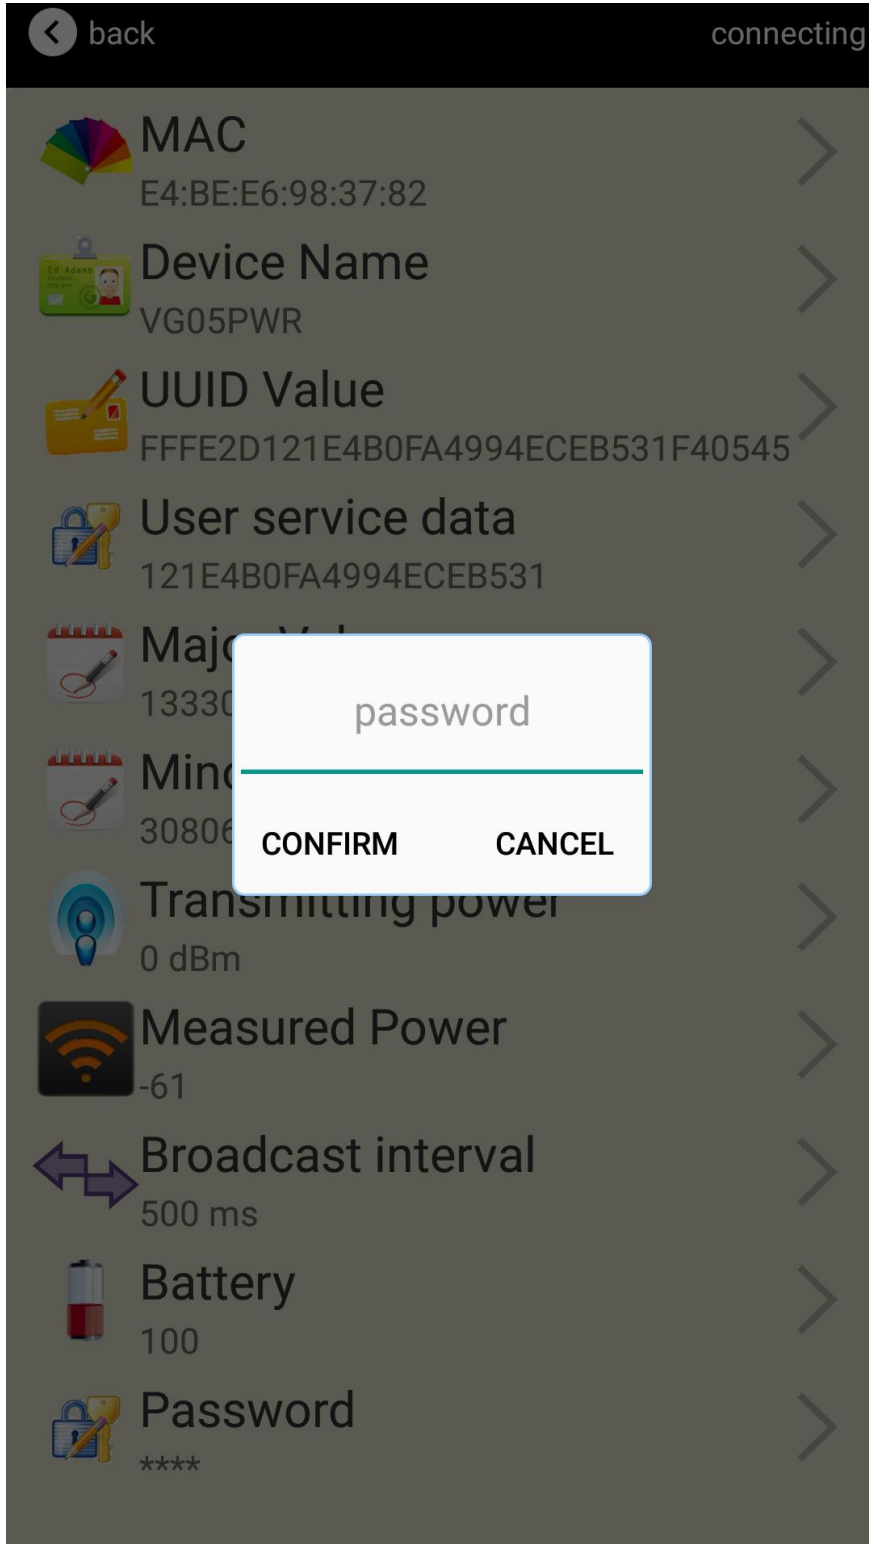

3.4 Configuration Introduction

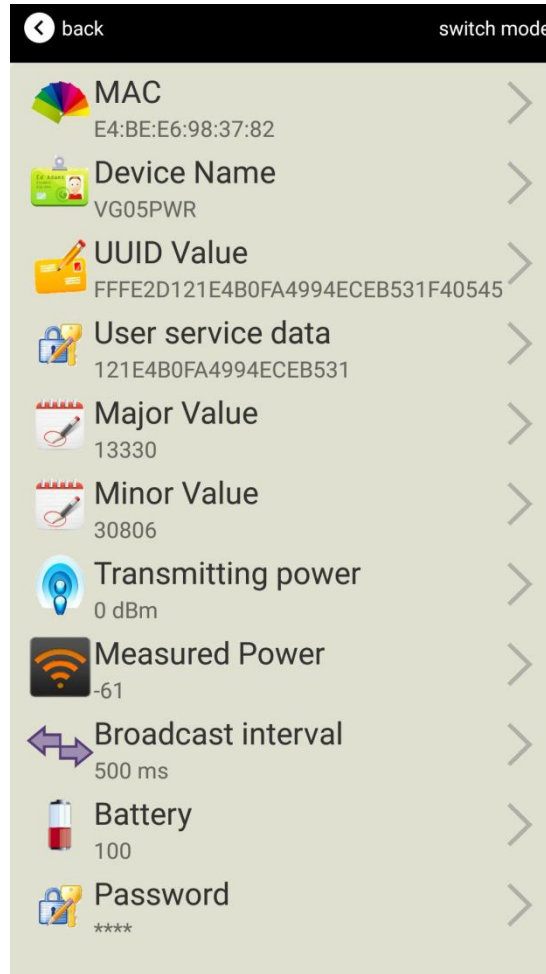

Introductions:

MAC: Chip MAC address

Name: The name of the Bluetooth Beacon which is selected.

UUID: 128-bit identifier according to ISO/IEC11578:1996 standard (32 hexadecimal digits)

Major: set 16-bit identifier (0-65535)

Minor: set 16-bit identifier (0-65535)

Measured Power: Signal strength at 1 meter (VDB1609 transmission power is 0dBm)

Transmit Power: VDB1609 transmit power

Advertise Interval: VDB1609 advertise interval


Battery Capacity: VDB1609 battery Capacity

Password: VDB1609 connection password

After the information is configured ,the configuration will take effect after the bluetooth connection is disconnected.

3.5 Modify Bluetooth Beacon Name

Click the “Device Name”, the following UI will be opened. Then enter a length of less than 12-bit English characters as VDB1609 device name in the following “Enter a Name” box. Then click “confirm to modify”.

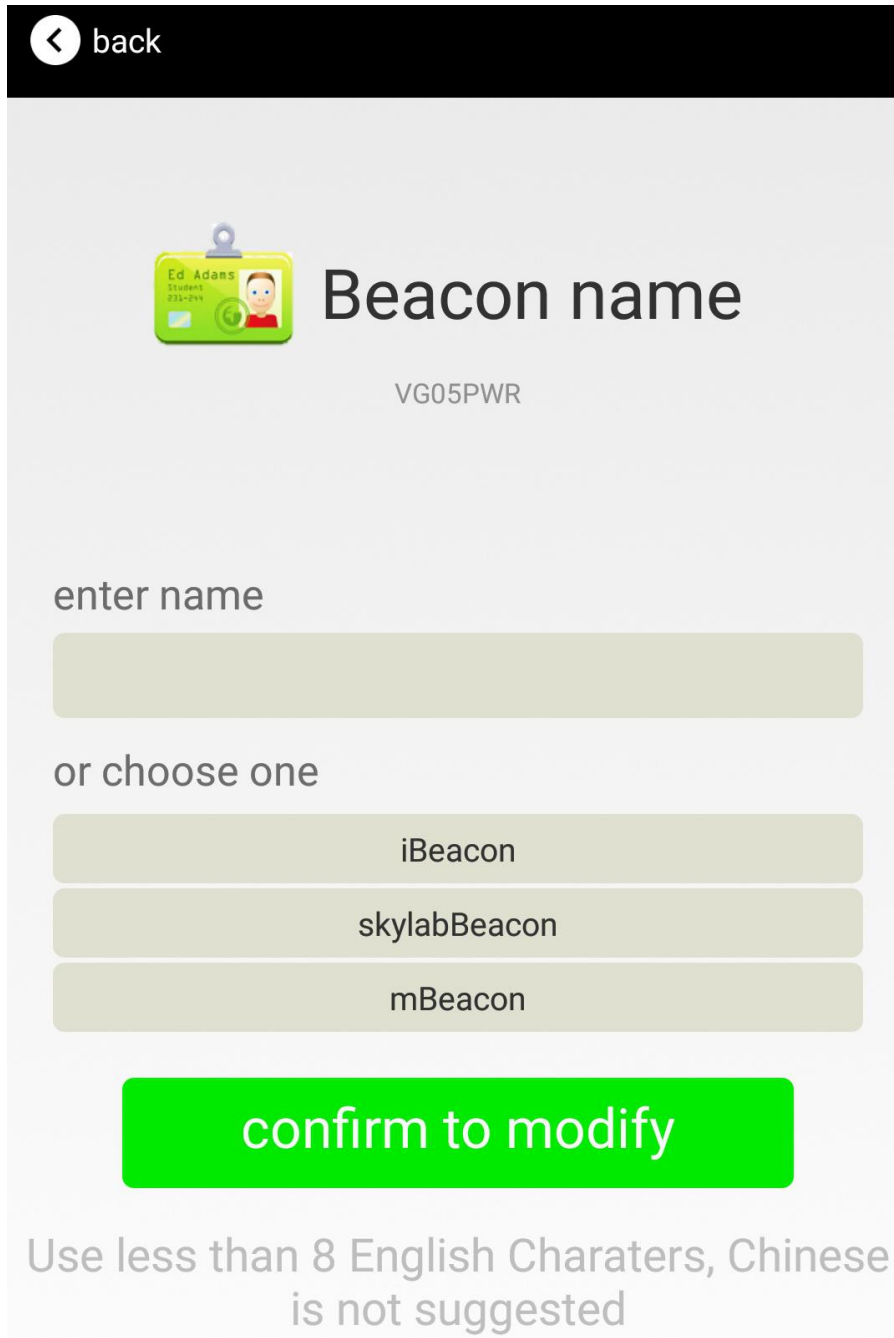

back

Ed Adams
231-244

Beacon name

VG05PWR

enter name

or choose one

iBeacon

skylabBeacon


mBeacon

confirm to modify


Use less than 8 English Charaters, Chinese is not suggested

3.6 Modify UUID

Click the “UUID”, ,the following UI will be opened. Then and then enter a 32-byte string of sixteen as the UUID of VDB1609 in the following “Enter an UUID” box. Then click “confirm to modify”.

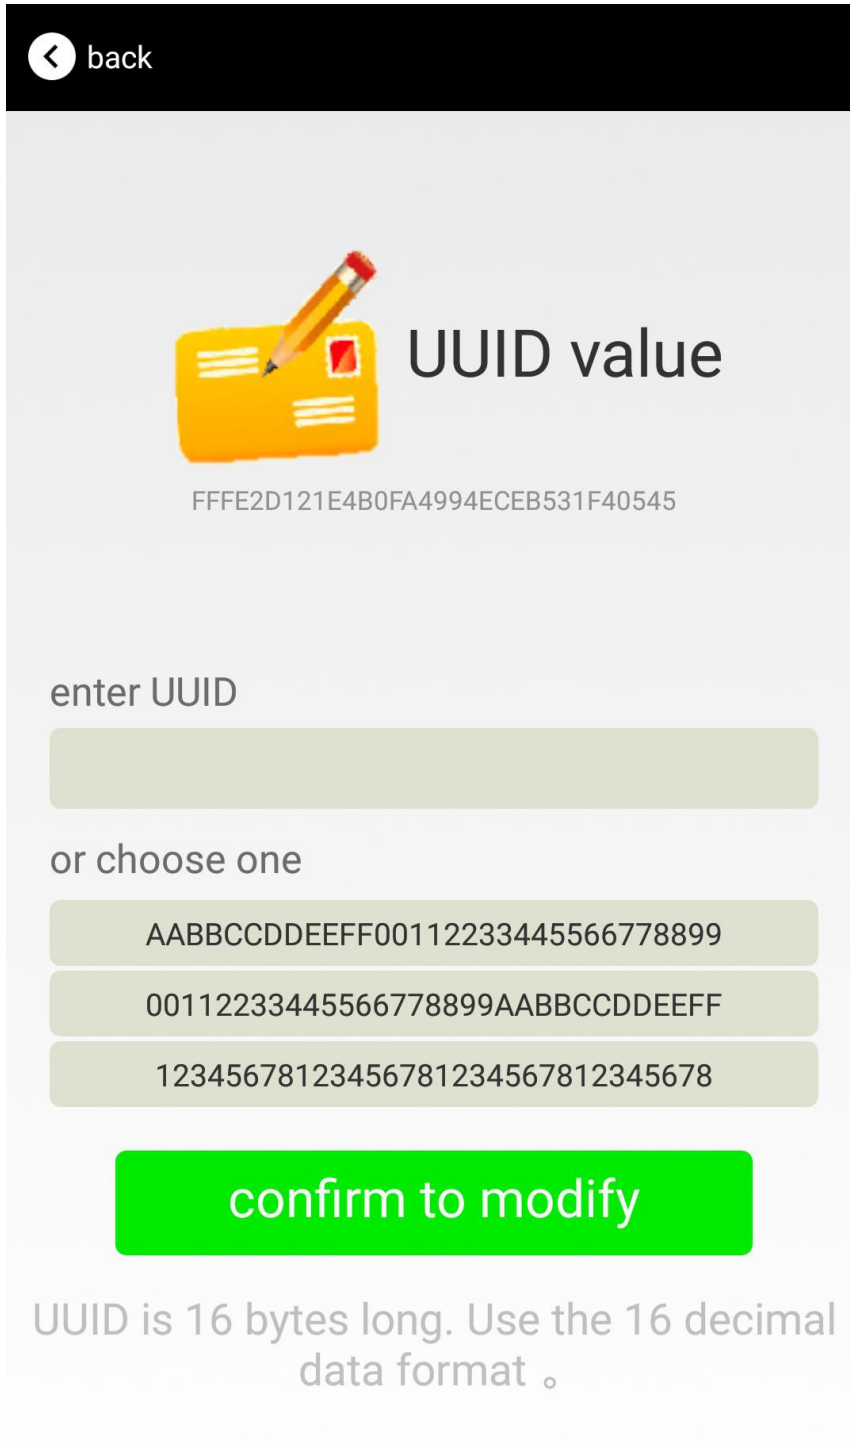

back

 UUID value

FFFE2D121E4B0FA4994ECEB531F40545

enter UUID

or choose one

AABBCCDDEEFF00112233445566778899

00112233445566778899AABBCCDDEEFF


12345678123456781234567812345678

confirm to modify


UUID is 16 bytes long. Use the 16 decimal data format .

3.7 Modify User service data

Click the " User service data ", the following interface will be opened. Then enter a Hexadecimal string of 24 word . Then click "confirm to modify".

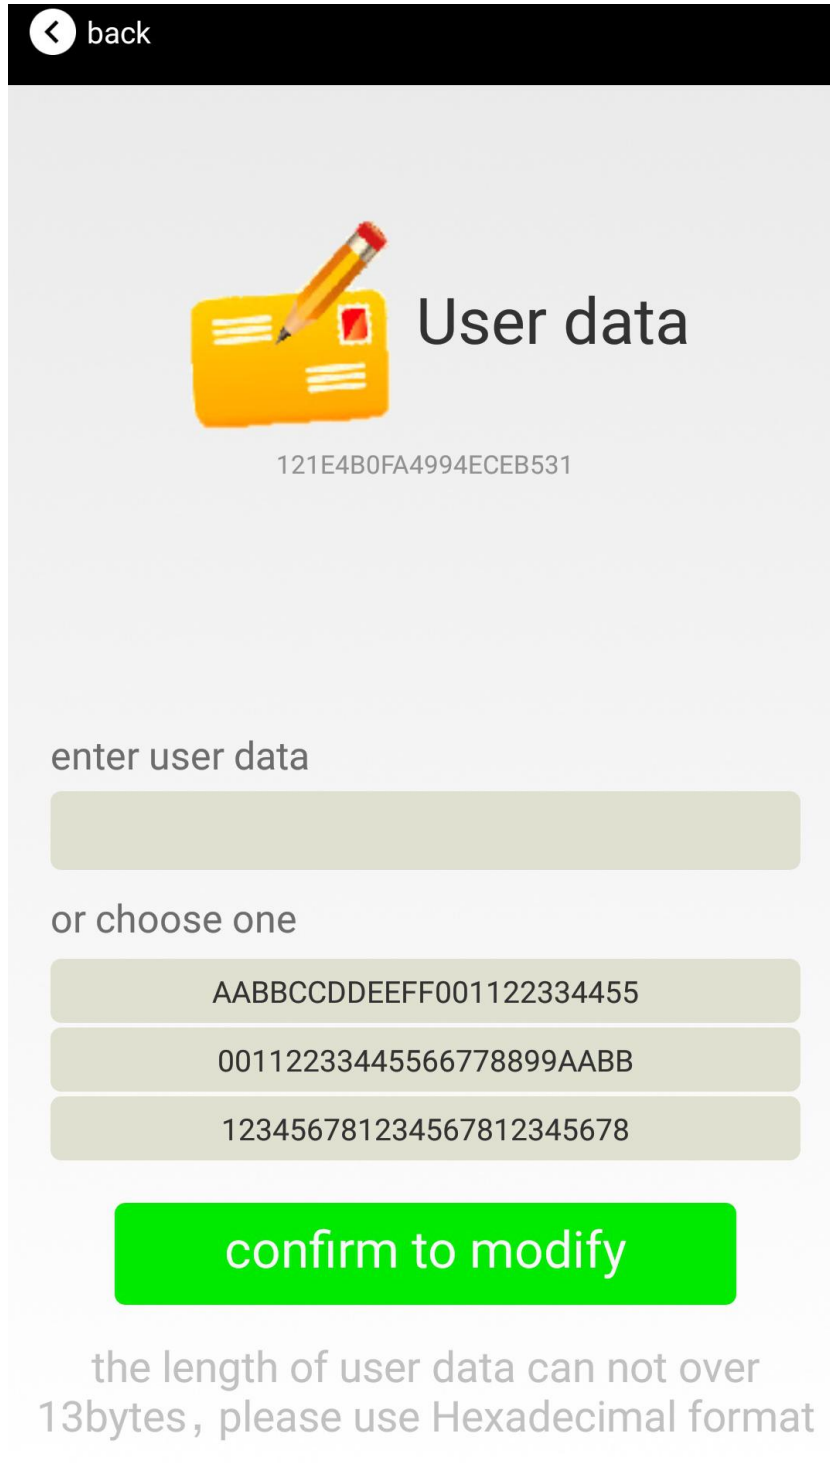

back

 User data

121E4B0FA4994ECEB531

enter user data

or choose one

AABBCCDDEEFF001122334455

00112233445566778899AABB



123456781234567812345678

confirm to modify

the length of user data can not over 13bytes , please use Hexadecimal format

3.8 Modify Major/Minor


Click the "Major"/"Minor" ,the following UI will be opened. Then set a value between 0~65535 as the Major/Minor value of the device. Then click “confirm to modify”.

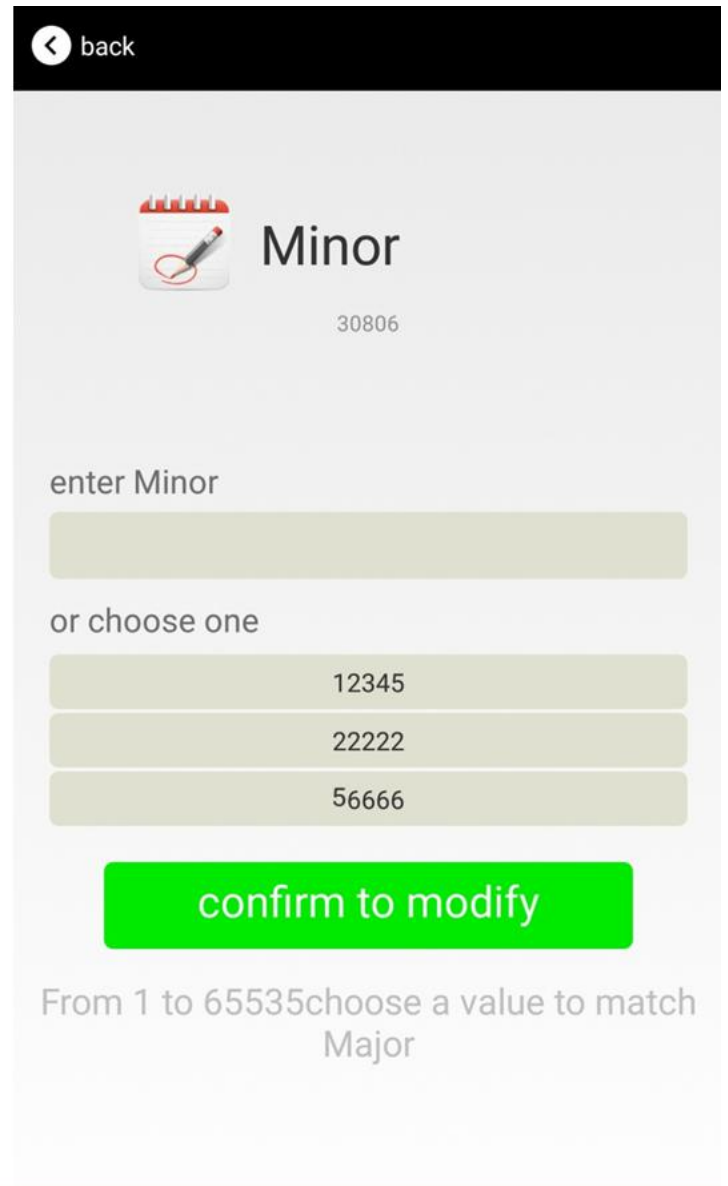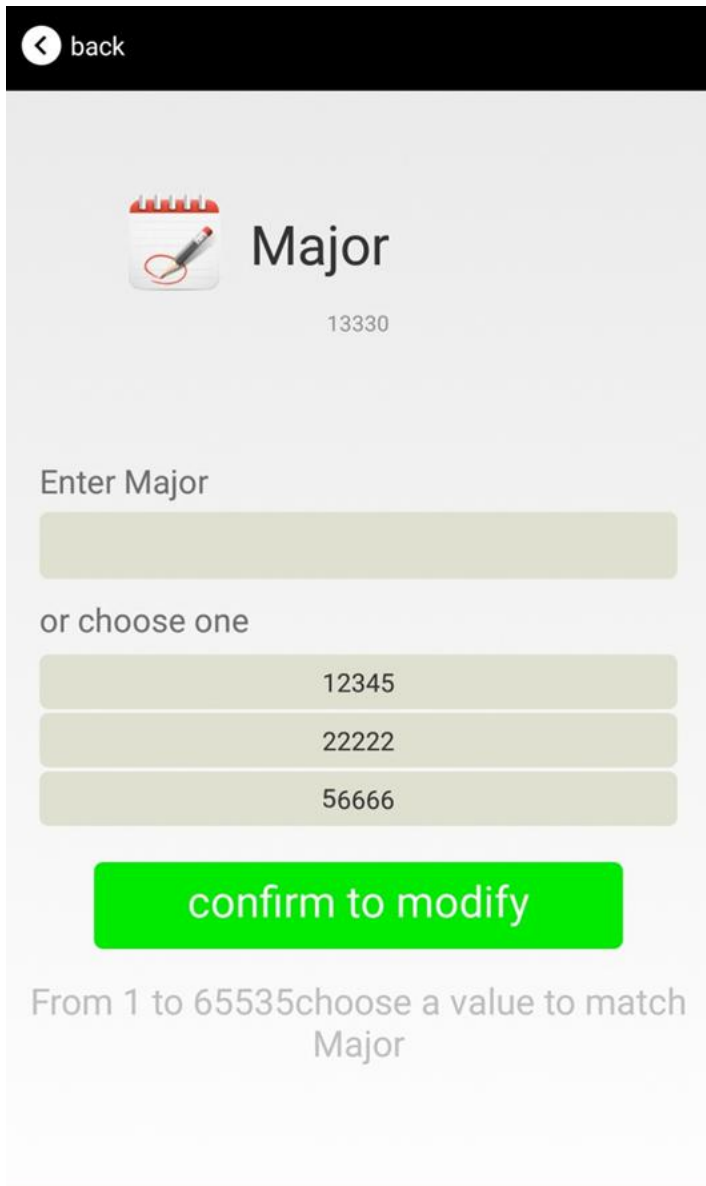

3.9 Modify Measured Power


Click the “Measured Power”, the following UI will be opened. Then select a measured power range from -100dBm to -30dBm. The default is -61dBm. Then click “confirm to modify”.

Measured Power means, when a phone’s RSSI is -61dBm, it is about 1 meter from VDB1609.

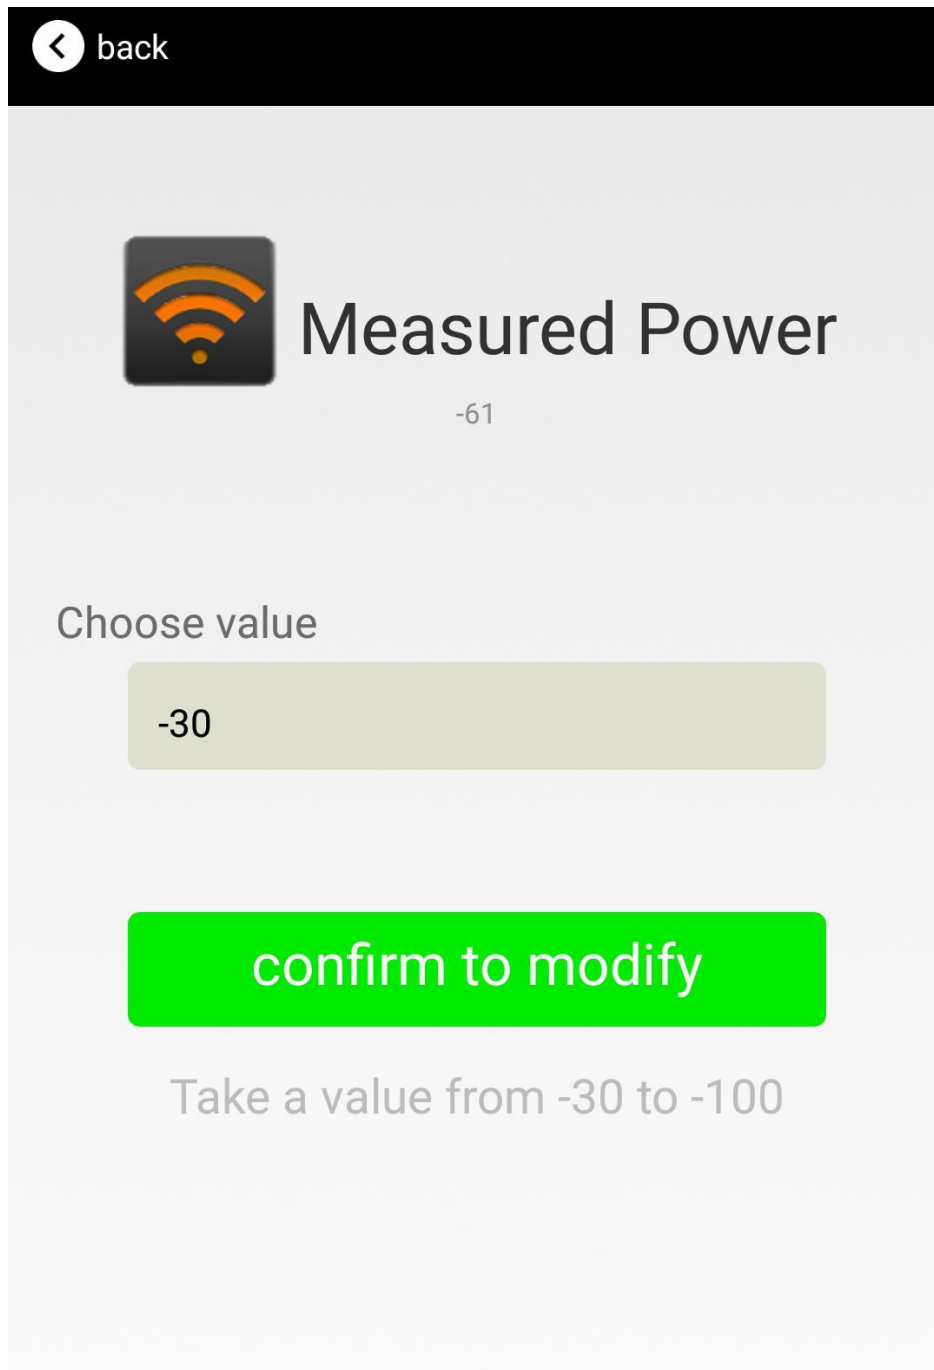


3.10 Modify Transmitting Power

Click the "Transmitting Power" ,the following UI will be opened. Then set a transmitting power, which can be set to: -16dBm, -12dBm, -8dBm, -4dBm, 0dBm, 4dBm(8dBm will be added in the future). Default Power is 0dBm. Then click "confirm to modify".

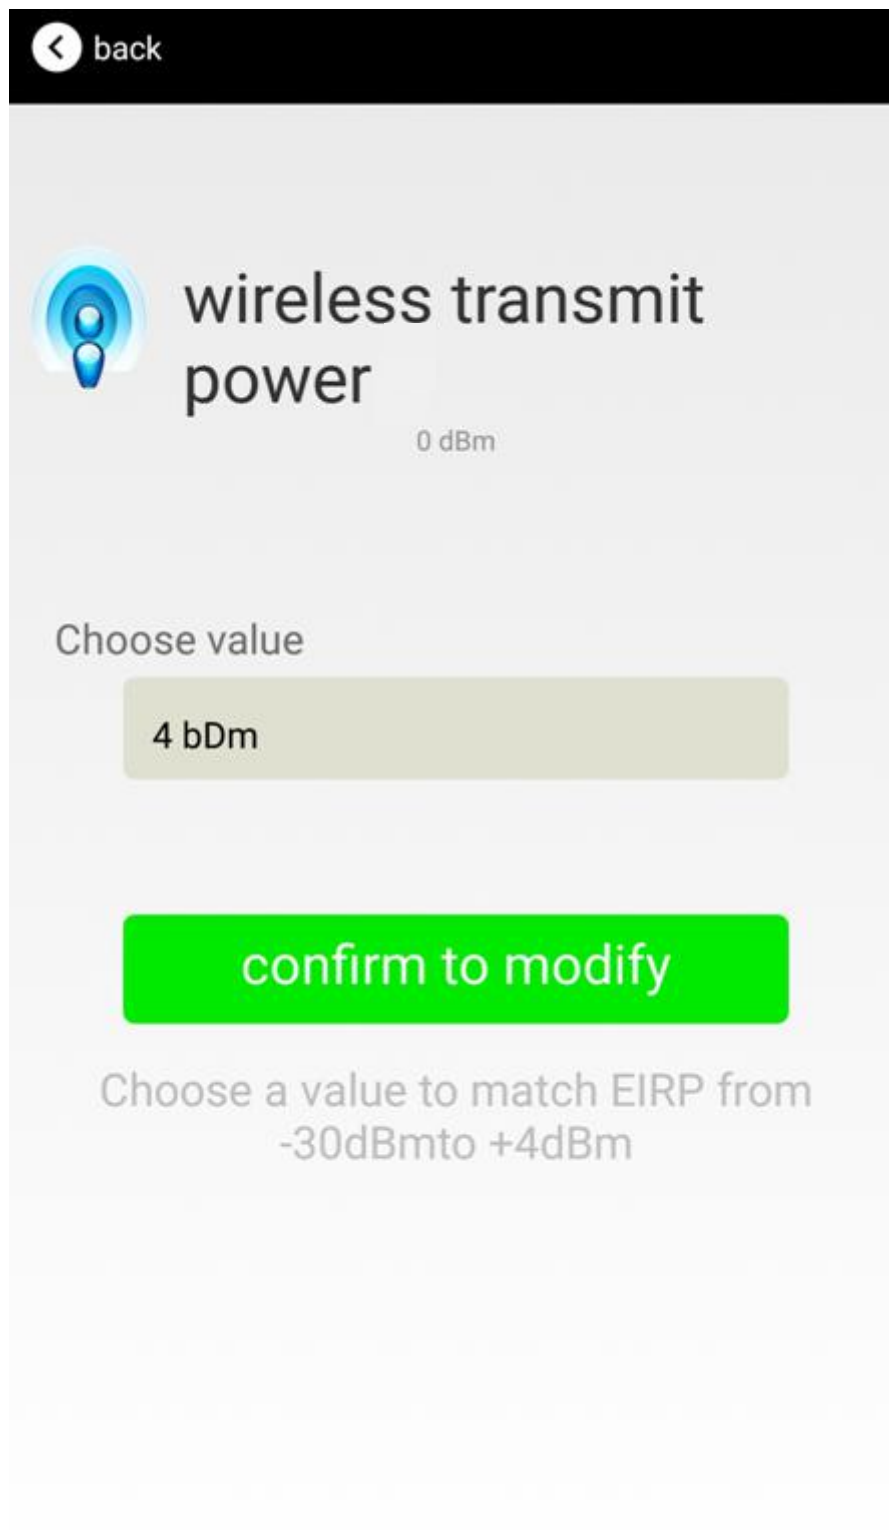


3.11 Modify Advertise Interval

Click the "Advertise Interval" ,the following UI will be opened. Then set a advertise interval. Broadcasting interval can be set to 100ms, 200ms, 300ms, 400ms, 500ms, 600ms ,700ms, 800ms, 900ms and 1000ms. The default is 500ms. Then click “confirm to modify”.

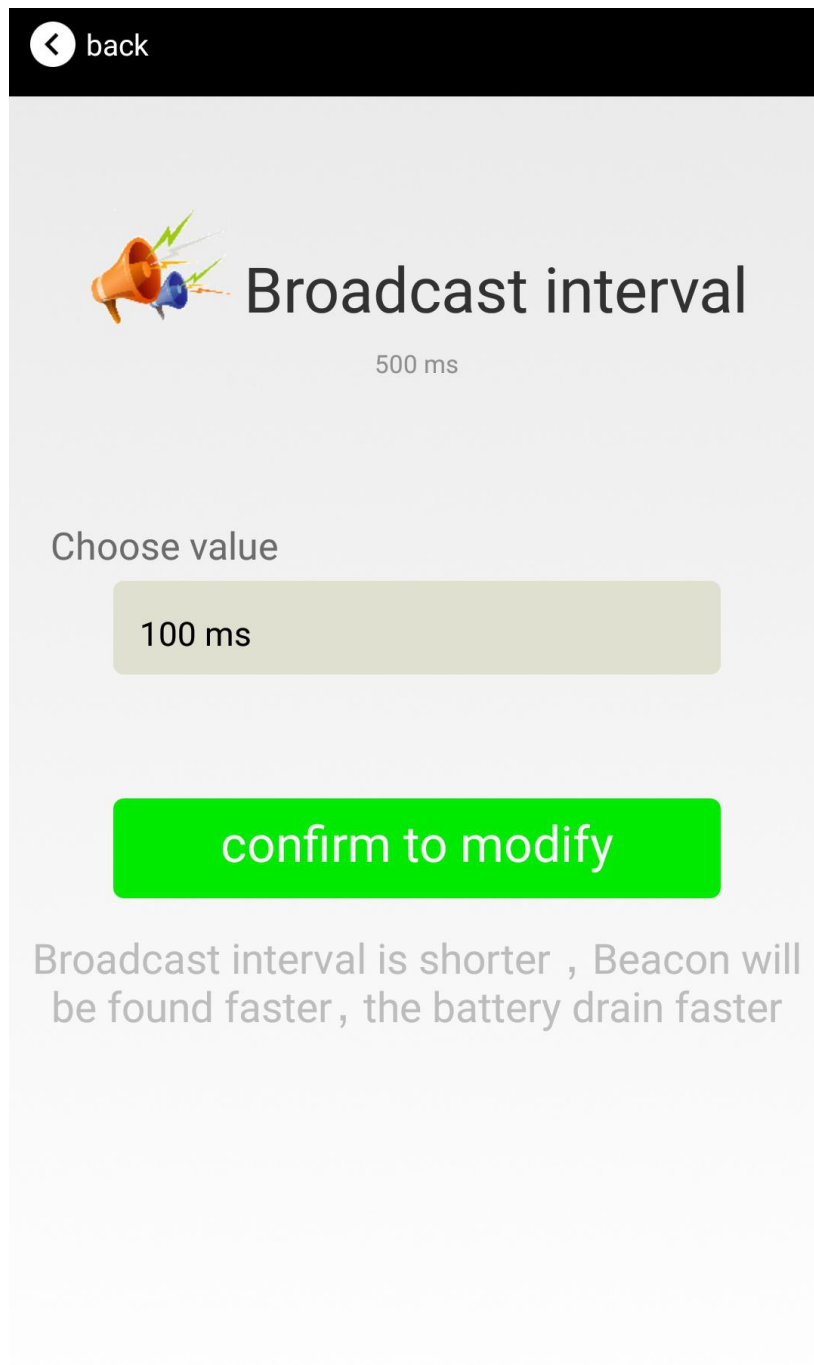

3.12 Modify Password


Click the “Password”, ,the following UI will be opened. Then and then enter the 4 characters as a connection password in the “Password” box, the default is 1234. Then click “confirm to modify”.

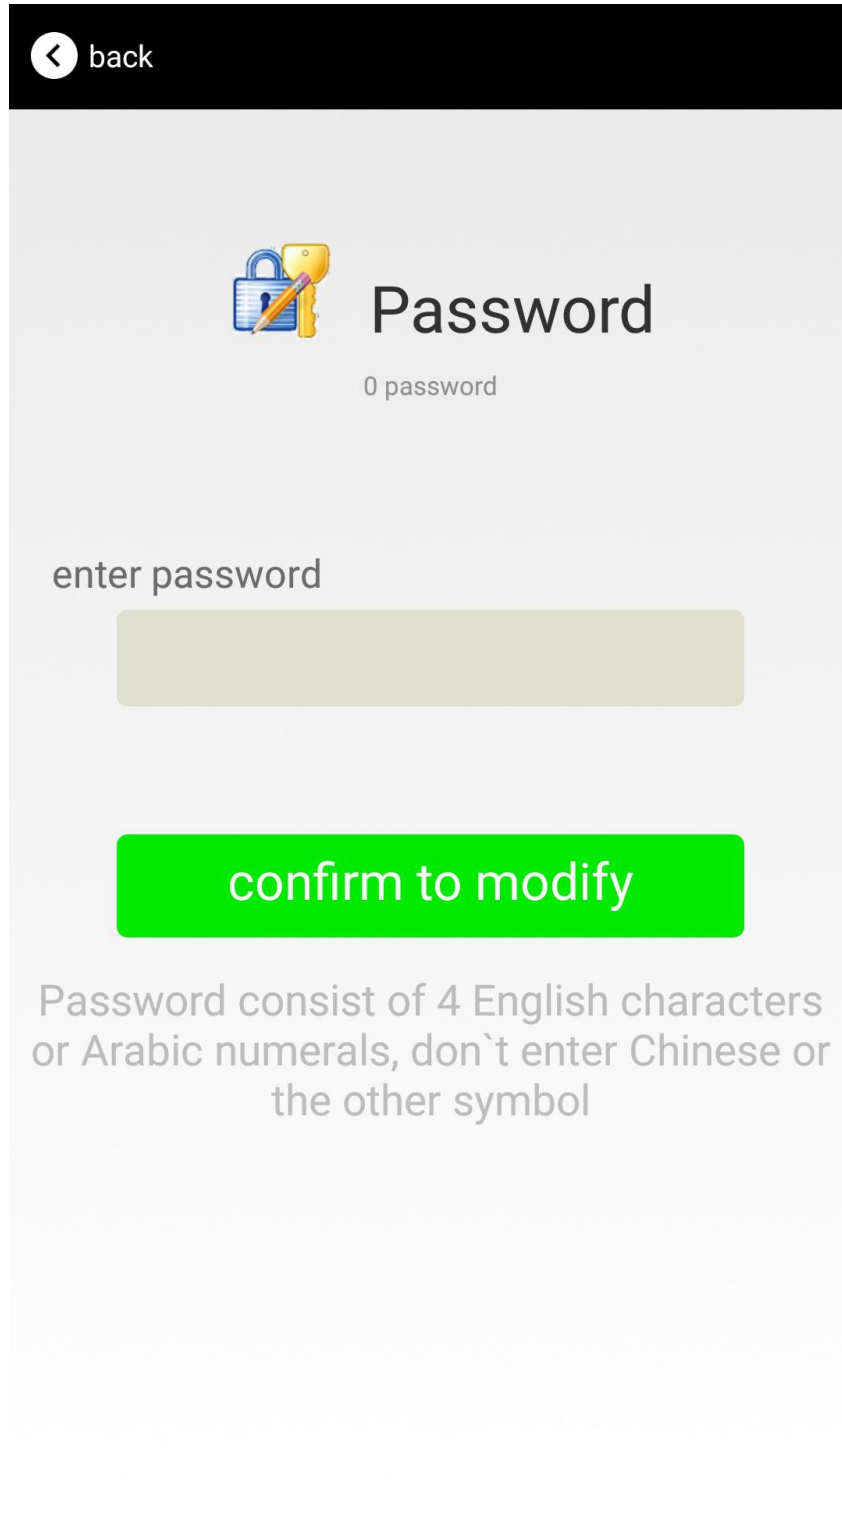


The screenshot shows a mobile application interface for password modification. At the top, there is a black header bar with a white back arrow and the text "back". Below the header, the main content area has a light gray background. In the center, there is an icon of a blue padlock and a yellow key with a pencil, followed by the word "Password" in a large, bold, black font. Below the title, it says "0 password". There is a text input field with the placeholder text "enter password" and a light gray background. Below the input field, there is a prominent green button with the text "confirm to modify" in white. At the bottom, there is a gray text box containing the instruction: "Password consist of 4 English characters or Arabic numerals, don`t enter Chinese or the other symbol".

3.13 Switch mode

Click “switch mode” on the upper right corner, the mode selection window will be opened. Then you can choose iBeacon or Eddystone mode. Default mode is iBeacon.

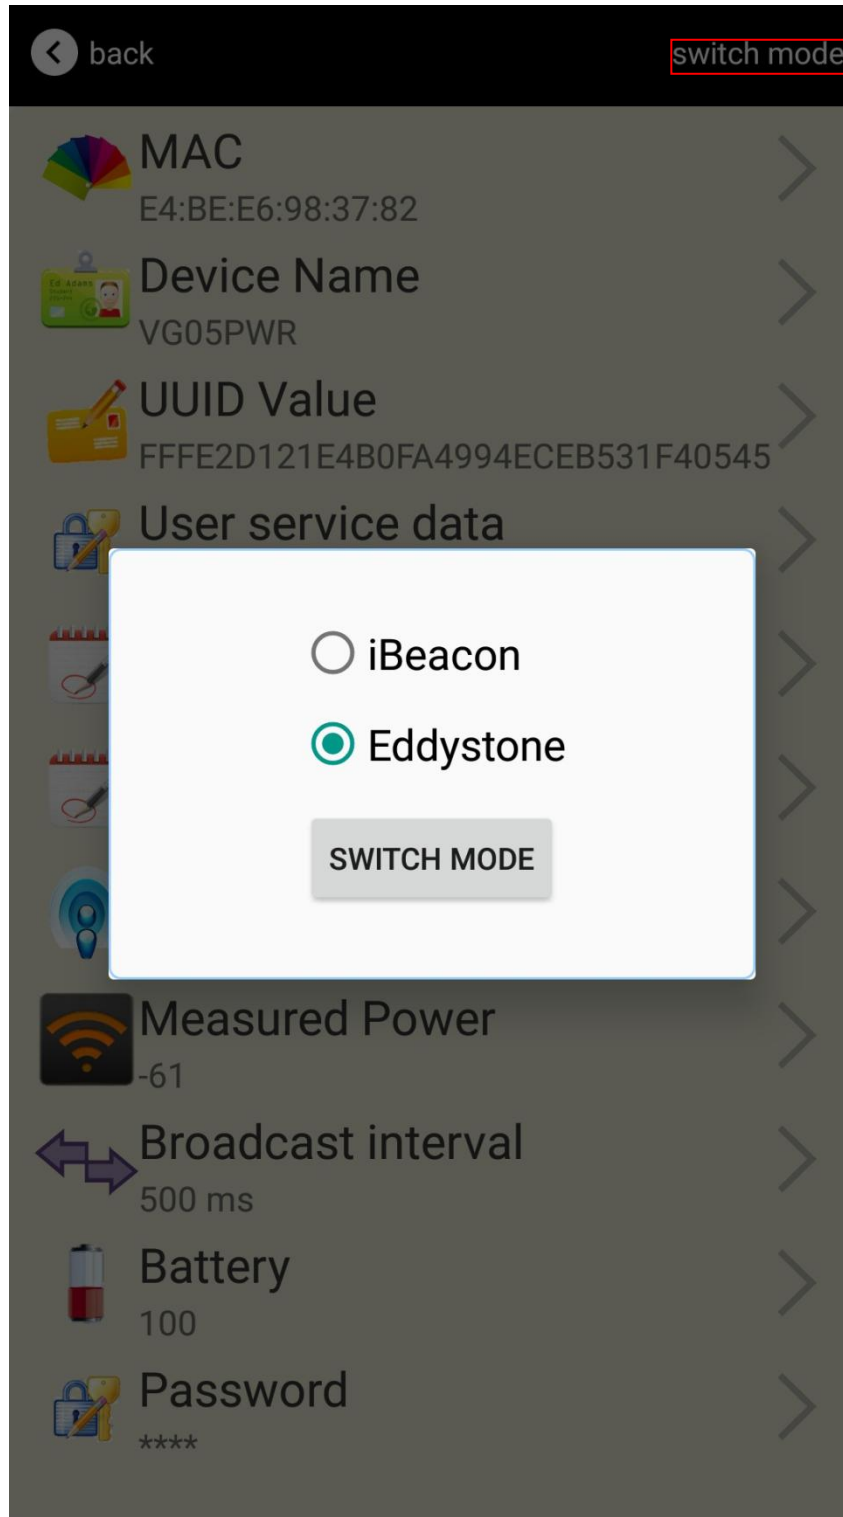

3.14 Eddystone configuration page Introduction

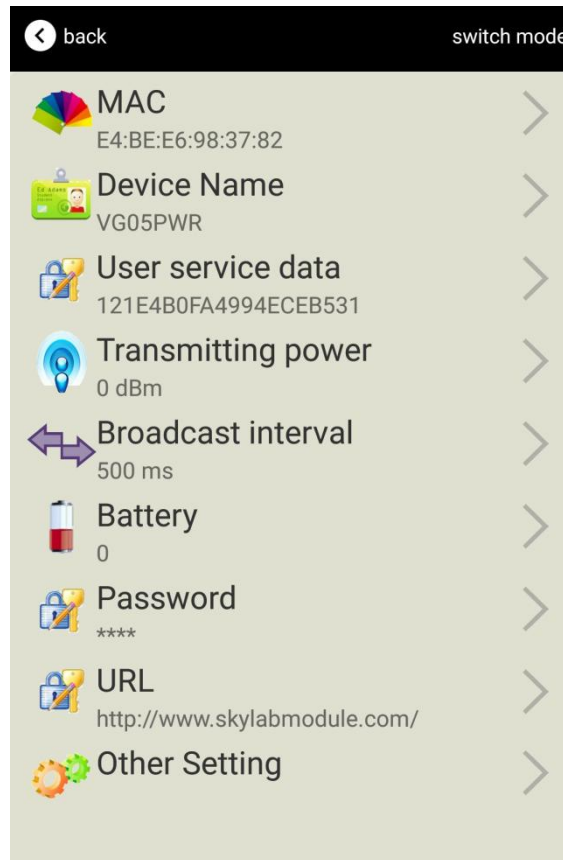

Introduction:

MAC: Chip MAC address

Name: The name of the Bluetooth Beacon which is selected.

User service data: User-defined data in broadcasting

Transmit Power: VDB1609 transmit power

Advertise Interval: VDB1609 advertise interval

Battery Capacity: VDB1609 battery Capacity

Password: VDB1609 connection password


URL : modify the Frame field information in Eddystone. The default format is URL. Other Formats can be selected by other setting

Other setting :Format selection of Frame field information in Eddystone.

After the information is configured ,the configuration will take effect after the bluetooth connection is disconnected.


3.15 Modify URL

Click “URL” ,the following UI will be opened. Then input at most 16 characters as broadcasting URL. Then click “confirm to modify”.

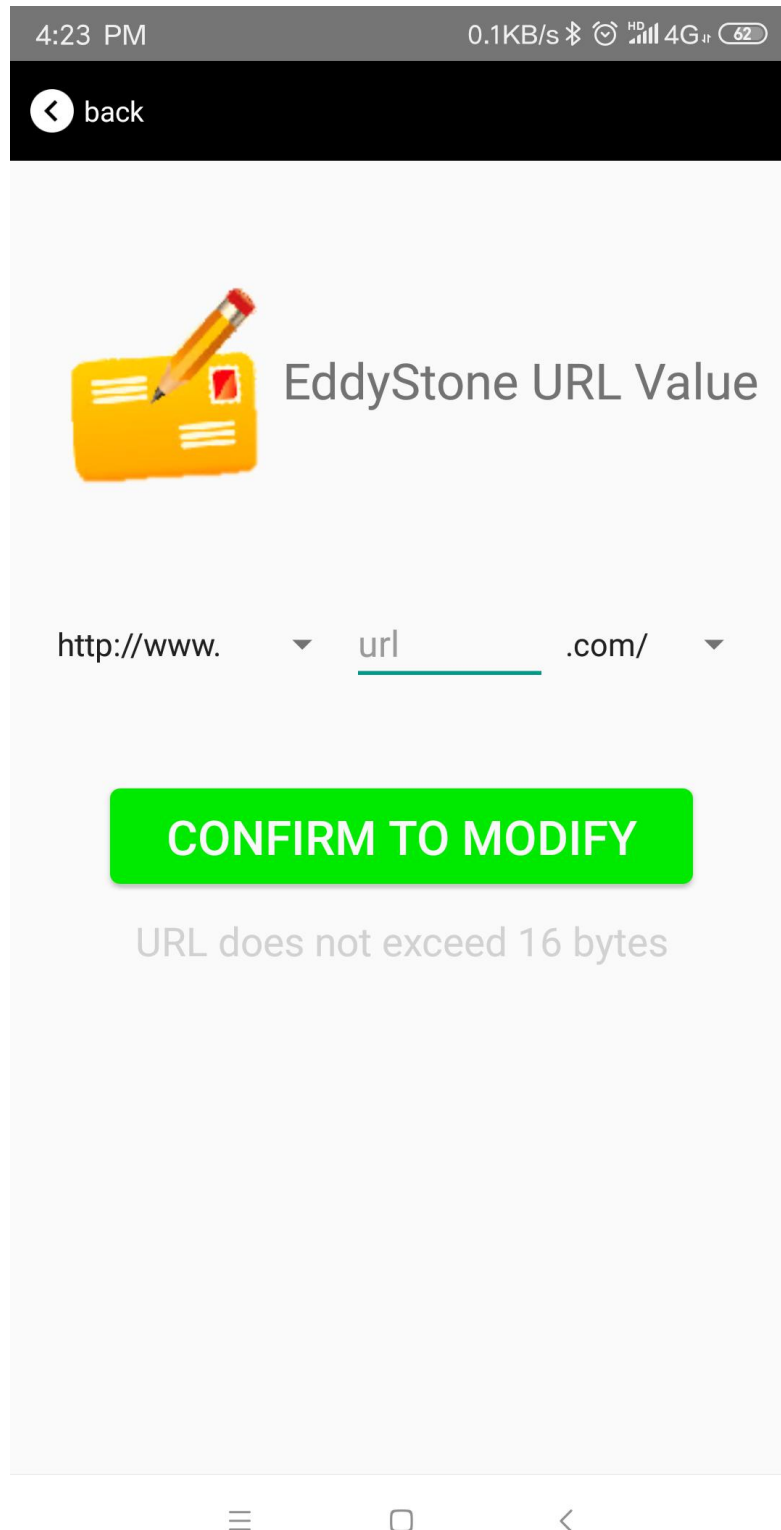


3.16 Other Setting

Click "Other setting", the following UI will be opened. The following three options are UID, EID and TLM.

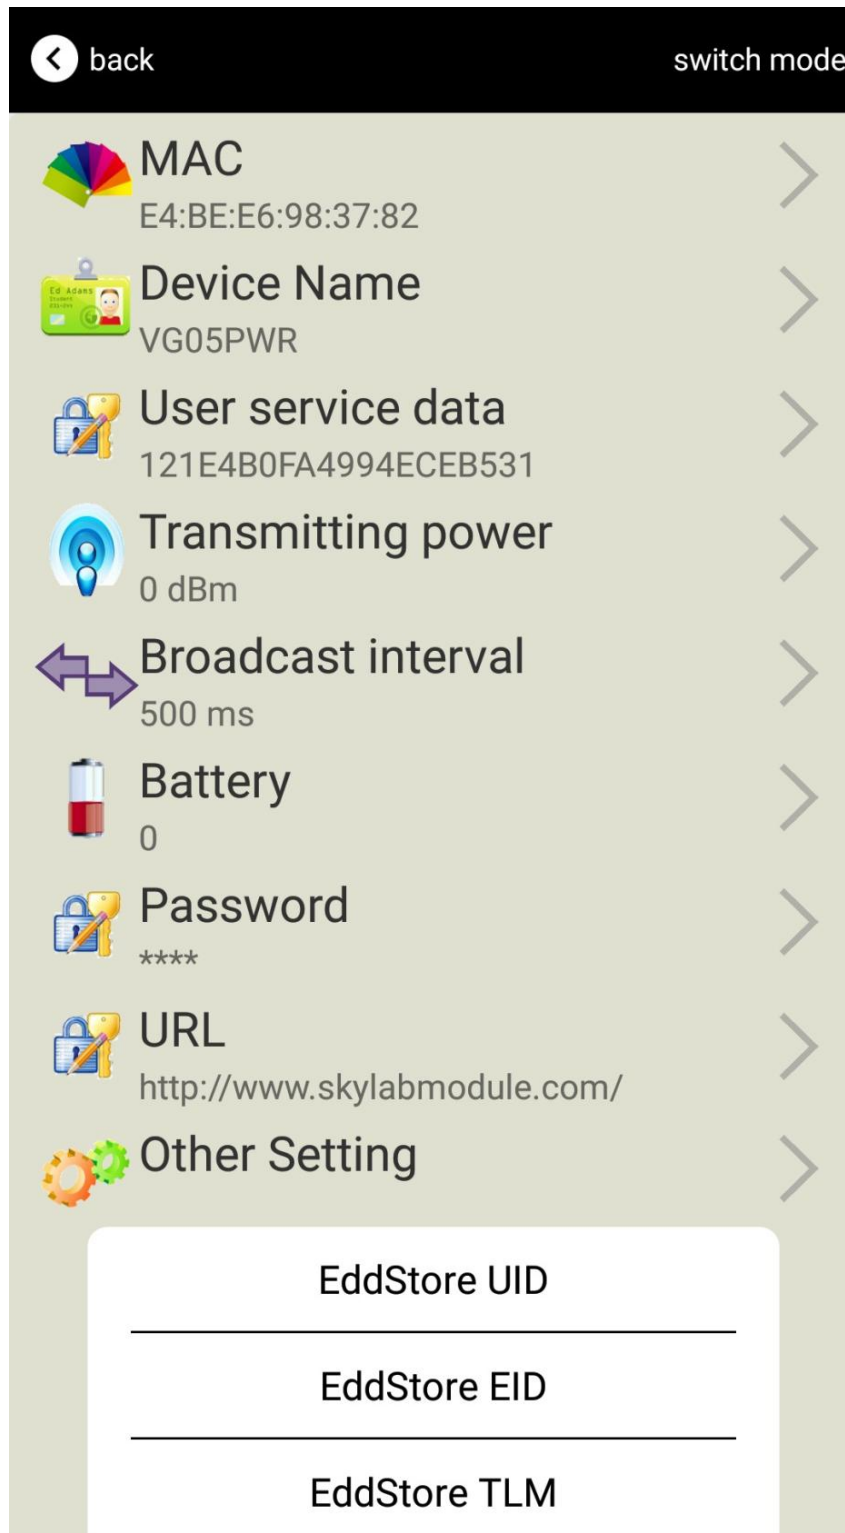


Select and set UID information:


NameSpace(10 bytes) and Instance(6 bytes) are set,respectively.

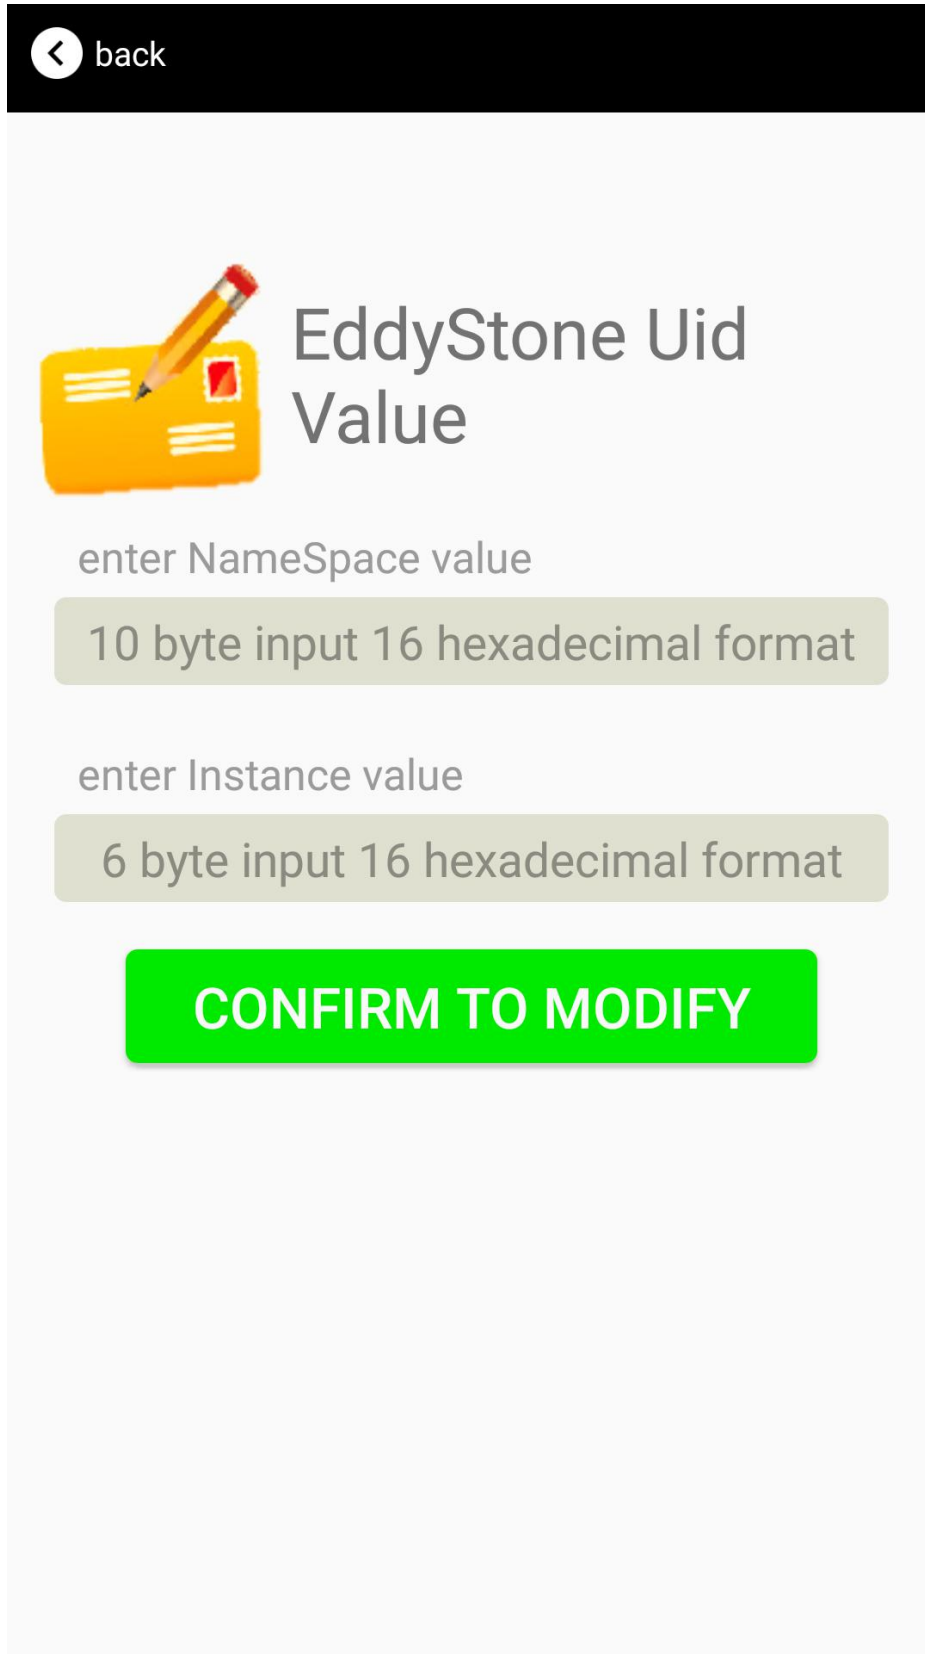

Select and set EID information:

Set EID information, maximum 8 bytes.

 back



Encrypted value

Enter Encrypted

or choose one

AABBCCDDEEFF0011

0011223344556677


1234567812345678


CONFIRM TO MODIFY

Use less than 8 English Charaters, Chinese is not suggested

Select and set TLM information:

Select “Encrypted TLM specification” (suggested), and input encrypted TLM data(at most 12 byte), 16-bit Salt(2 byte) and 16-bit Message Integrity check(2 byte).

 back



TLM data value

Encrypted TLM specification
 Unencrypted TLM specification

Encrypted TLM data 12 byte

16-bit Salt 2 byte

16 bit Message Integrity Check 2 byte

CONFIRM TO MODIFY

4. Contact information

95Power Information Technology Co., Ltd

深圳市微能信息科技有限公司

Address: 6 Floor, Building 9, Lijincheng Scientific & Technical Park, Gongye East Road, Longhua District,
Shenzhen

Tel: 86-755 23779409

Fax: 86-755 23779409

E-mail: sales@95power.com.cn

Website: www.95power.com.cn